



Meaningful Innovation.

WEEE Number: 80133970

INSTRUCTION MANUAL

LED PRISMATIC FITTING



TECHNICAL DATA

 
MODEL	VT-8340CCT	VT-8350CCT	VT-8360CCT
SKU	23680	23681	23682
WATTS	40W	50W	60W
BODY TYPE	Plastic	Plastic	Plastic
DF	>0.9	>0.9	>0.9
CRI	>80		
BEAM ANGLE	120°		
LIFE SPAN	25,000 Hours		
ON/OFF CYCLE	>15,000 Times		
IP RATING	IP20		
INPUT VOLTAGE	AC:220~240V, 50Hz		
OPERATING TEMPERATURE	-20°C to +40°C		
OPERATING HUMIDITY	10%~95%		
LUMINOUS EFFICIENCY [LUMENS@SPHERE 360°]	4300/4800	6000	7200
NET WEIGHT	365±5g	450±5g	525±5g

DIMENSIONS	D1(mm)	D2(mm)	L1(mm)
40W	24±1	76±1	1166±2
50W	24±1	76±1	1466±2
60W	26±1	76±1	1800±2



INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 3 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

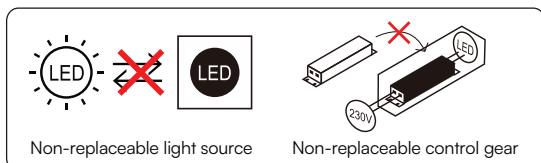

03 YEAR
WARRANTY*



**MULTI-LANGUAGE
MANUAL QR CODE**
Please scan the QR code to access the manual in multiple languages.

WARNING

1. Please make sure to turn off the power before starting the installation.
2. Installation must be performed by a qualified electrician.
3. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
4. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
5. For Indoor use only
6. Before installation, you must carefully check the integrity of the product and accessories
7. When installed, products and flammable materials to ensure that at least 0.2m distance, lighting cannot be installed in the zenith or heat wall, pay attention to low voltage and high voltage electrical wiring separately.
8. To ensure that the power cord has enough length, do not kink cables. Output cables should be laid separately and at a distance from other cables.

 
Note: Replace cable spec" H03VVH2-F 2X0.75mm² ", should be replaced by a qualified technician.



This marking indicates that this product should not be disposed of with other household wastes.



Caution, risk of electric shock.

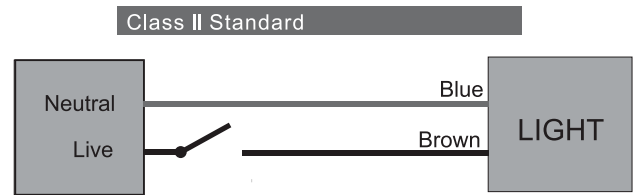

INSTALLATION INSTRUCTIONS

1. Please make sure to turn off the power before starting the installation.
2. Choose the right position, drill two holes and insert the screw (make sure the distance between the holes is no less than 50mm, Less than bracket length).
3. Shrapnel point it at the hole and then install the screws (Three installation buckles can be fixed according to the actual situation for lengths of 1.5M and above).
4. Connect the wires.
5. There is a button at one end of the lamp for colour temperature selection (3000K, 4000K and 6500K).
6. Press the lamp body firmly into the mounting buckle to fix the lamp body, Slide the lamp body along the mounting buckle to the desired position as needed.
7. Turn the power ON and test.



INSTALLATION DIAGRAM

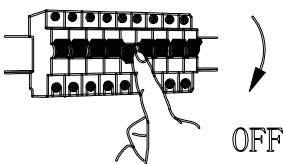 


Figure 1

 


Figure 2

 


Figure 3

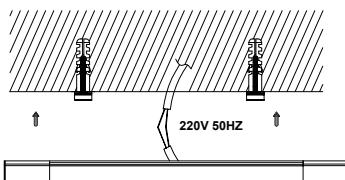 


Figure 4



Figure 5

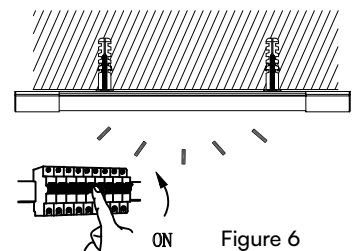 


Figure 6

